

EZiCaddy Fitting Instructions to replace Power Frame Lower



Tools required.

Wire cutters
PZ 1 Screwdriver
PZ 2 Screwdriver






1/ Stand cart against a wall as shown to give easy access to the underneath of the cart. The large back panel should be horizontal and facing the ceiling



2/ Remove all screws as shown with a Pozidrive No2 Screw driver.



3/ Lift edge of lower cover to remove.

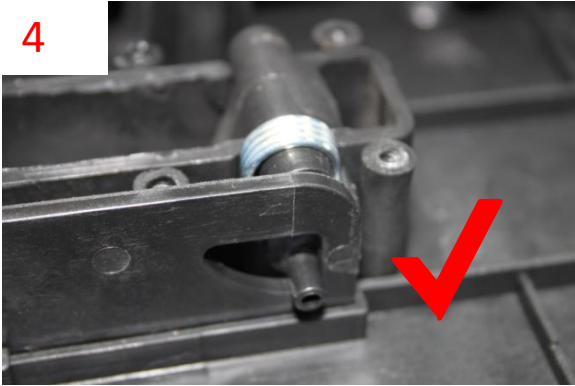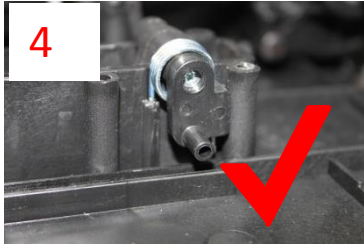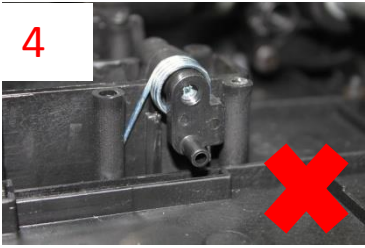

4/ Before reassembly using the new cover panel check the position of the handle latch spring and actuating arm to ensure they have not been moved during the removal of the lower panel.



5/ Ensure the motor mount is correctly positioned and the motor is seated correctly. It can be forced to fit incorrectly but only fits one way correctly – take your time !



5/ Carefully route the wires as shown in the picture taking great care to avoid all screw bosses.

6



6/ Refit the rear cover ensuring no wires or moving parts are trapped between the cases.

7



7/ Refit all the case screws. Make sure the two longer case screws are in the positions shown. Take care not to over tighten the screws.